



7000 Master Programming Mode

NOTE:

1. Set Time of Day Display to 12:01 P.M.
2. Push and Hold the Set Down and Set Up Button for 5 Seconds.
3. Press Extra Cycle Button Once Per Display Until All Displays Are Viewed and Normal Operation Is Resumed.
4. Option Setting Display May Be Changed As Required by Pushing Either the Set Down or Set Up Button.
5. Depending on Current Valve Programming, Certain Displays May Not Be Viewed or Set.

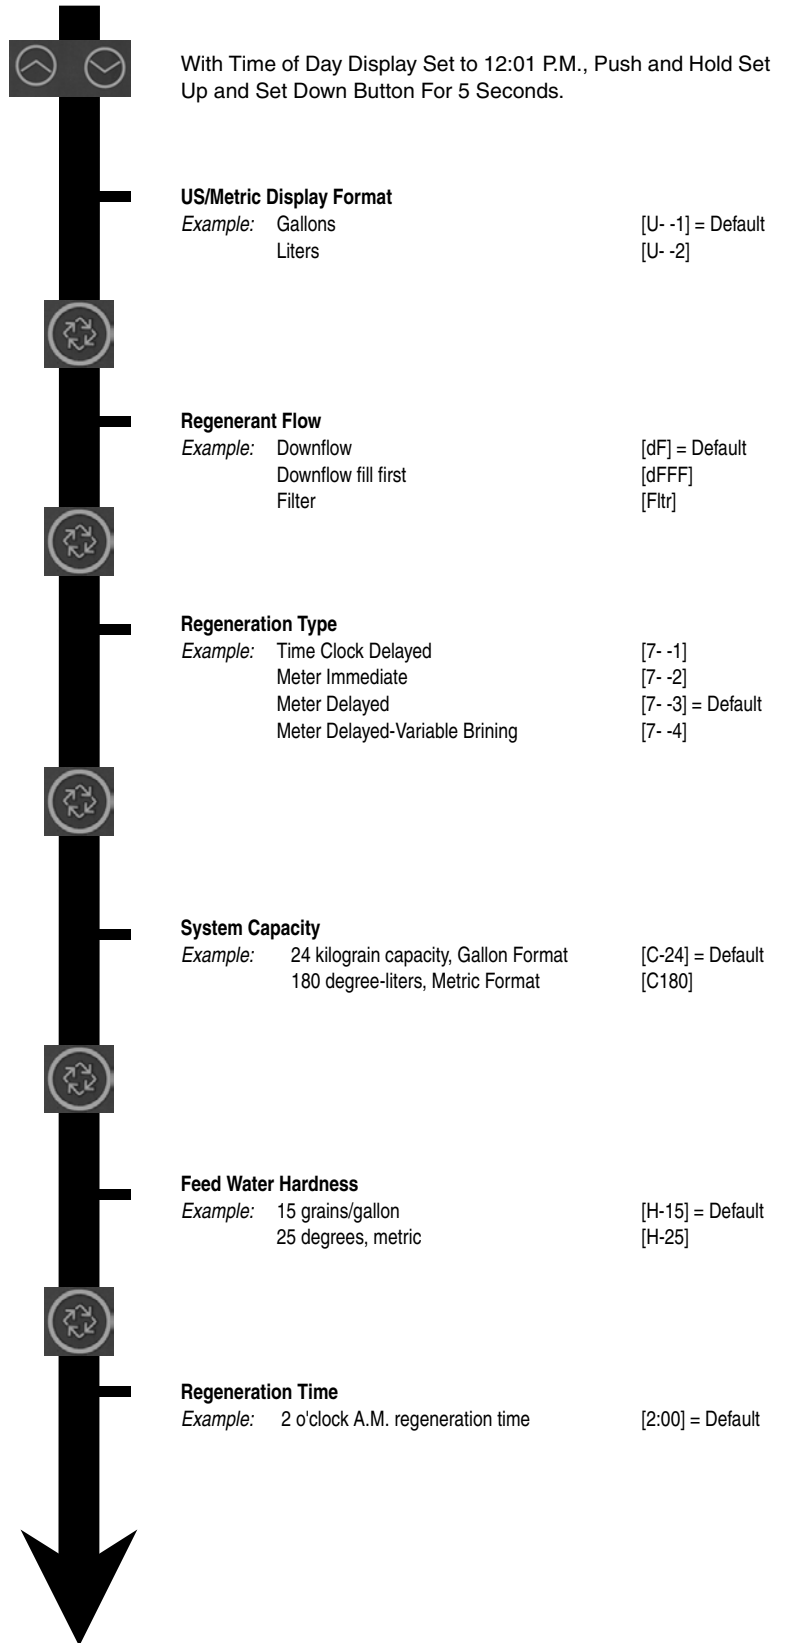

7000 Master Programming Mode

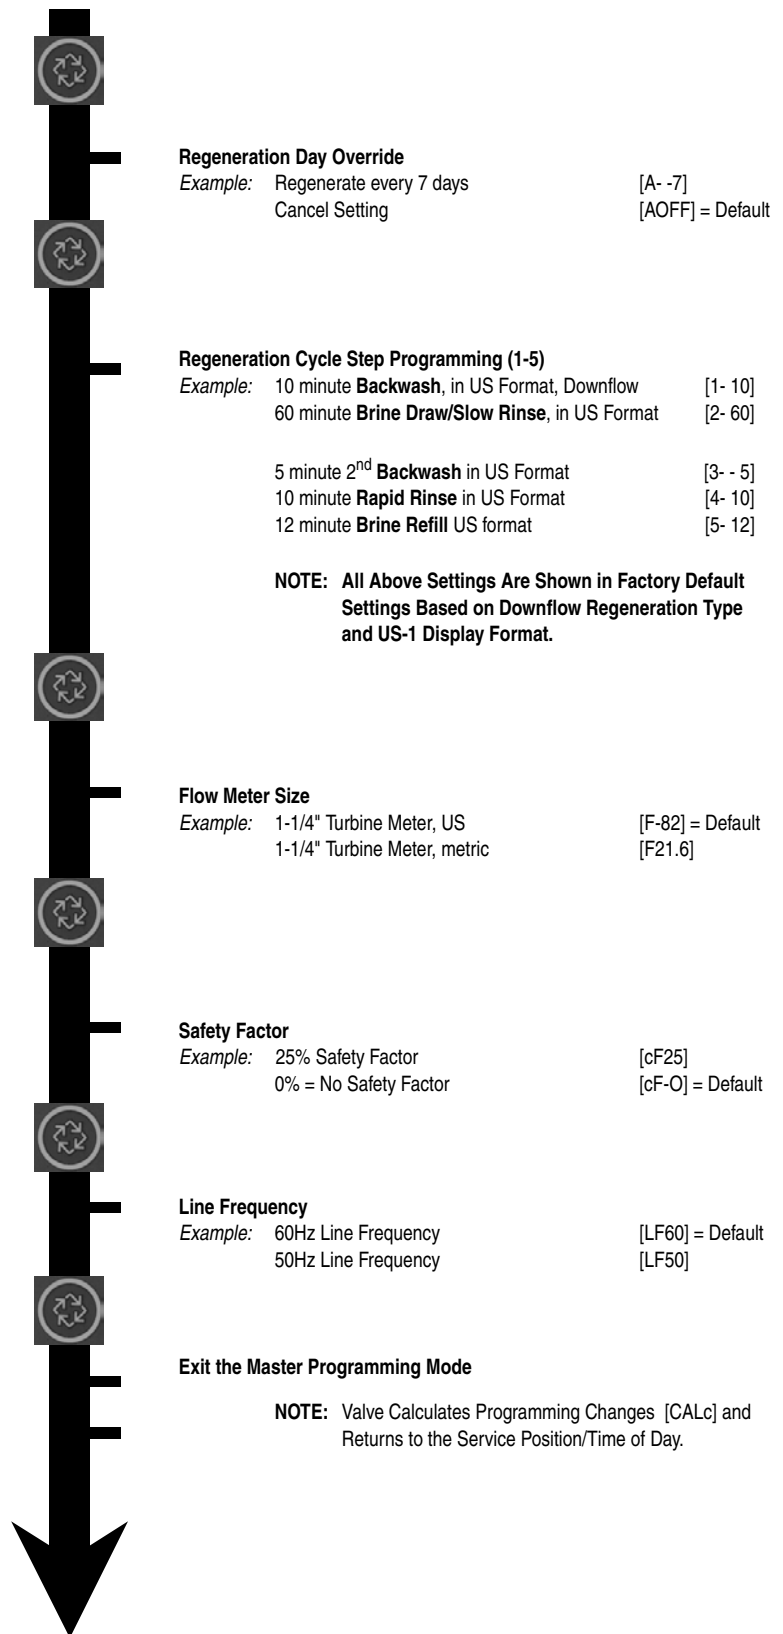

7000 Master Programming Mode

Entering Master Programming Mode

Set the **Time of Day** to 12:01 P.M., then press and hold both the **Set Up** and **Set Down** buttons for five (5) seconds. The program indicator light turns on to signal that the **Master Programming Mode** is entered. All program steps may be programmed in this mode.

- Use the **Set Up** and **Set Down** buttons to change all settings.
- Press the **Extra Cycle** button to advance to the next program step.

1. US / Metric Display Format (Display Code u)

Use this program step, identified by the letter **U** in the first digit of the display, to set the desired display format. There are two possible display settings:

US = gallons of water and grains of hardness Setting: [u - - 1]
Metric = liters of water and degrees of hardness Setting: [u - - 2]

Default = US [u - - 1]

- Use the **Set Up** and **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button to proceed to the next step.

2. PISTON / CAM Type (Display Code dF, dFFF, Filtr)

Use this program step to set the desired piston type. The letters in the display stand for the following piston types:

dF: down flow
dFFF: down Flow Fill First
Filtr: Filter

Default

[dF] down flow

- Use the **Set Up** and **Set Down** buttons to select the desired piston type.
- Press the **Extra Cycle** button to proceed to the next step.

NOTE: If the US/metric setting or piston/cam type is changed, the valve auto-homes after exiting from the **Master Programming Mode**.

7000 Master Programming Mode

3. Regeneration Type (Display Code 7)

Use this program step, identified by the number **7** in the first digit of the display, to set the **Regeneration Type**. There are 4 possible settings:

Time Clock Delayed Setting: [7 -- 1]

The control regenerates on the days set in program step #7, at the **Regeneration Time** set in program step #6.

Meter Immediate Setting: [7 -- 2]

The control regenerates immediately when the available volume of softened water drops to 0.

Meter Delayed Setting: [7 -- 3]

The control regenerates on the day the available volume of softened water drops to less than the reserve volume. **Regeneration** starts at the Regeneration Time set in program step #6.

Meter Delayed - Variable Brining Setting: [7 -- 4]

The control regenerates on the day that the available volume of softened water drops to or below the reserve volume. Regeneration starts at the Regeneration Time set in program step #6. With the variable brining option activated, the time setting for Cycle 1 is automatically calculated based on the volume of treated water at the time of regeneration. Cycle time 1 will not exceed the original time setting and is never less than one (1) minute.

Default = Meter Delayed Regeneration [7 -- 3]

Available Regeneration Types and their Dependencies

<i>Piston / CAM Type</i>	<i>Regeneration Types Available</i>
dF	[7 -- 1], [7 -- 2], [7 -- 3]
dFFF	[7 -- 1], [7 -- 3], [7 -- 4]
Filtr	[7 -- 1]
<i>Default</i>	
dF	[7 -- 3]

- Use the **Set Up** and **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button to proceed to the next step.

7000 Master Programming Mode

4. System Capacity (Display Code C) for US and metric with an extended (Display Code Ct) in metric where t denotes x 1,000 multiplier

Example:

Ct1.9 = 1,900,000

NOTE: This program step is not available for **Regeneration Type Time Clock Delayed [7 - - 1]**.

Use this program step, identified by the letter **C** in the first digit of the display, to set the capacity of the system in kilograins (or Cubic meter X degrees for metric systems).

- Use the system capacity to calculate the amount of treated water (gallons or liters) to be treated by the unit before a **Regeneration Cycle** is required.
- The control automatically determines a reserve capacity based on water use history when **Regeneration Type** is set to Meter Delayed [7 - - 3] or Meter Delayed Variable Brining [7 - - 4].

Range = 1 – 299 kilograins, US [u - -1]

Range = 1 – 1,900,000 degree-liters, metric [u - - 2]

Default = 24 kilograins, US [u - -1]

Default = 180 degree-liters, metric [u - - 2]

Example:

24 kilograin system capacity Setting: [C 24]

- Use the **Set Up** and **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button to proceed to the next step.

5. Feed water Hardness (Display Code H)

NOTE: This program step is not available for **Regeneration Type Time Clock Delayed [7 - - 1]**.

Use this program step, identified by the letter **H** in the first digit of the display, to set the feed water hardness.

- Use the **Set Up** and **Set Down** buttons to set the amount of feed water hardness. The system automatically calculates treated water capacity based on the feed water hardness entered in this program step and the system capacity entered in program step #4.

Range = 4 – 199 grains/gallon, US [u - -1]

Range = 4 – 199 degrees, metric [u - - 2]

Default = 24 kilograins, US [u - -1]

Default = 25 degrees, metric [u - - 2]

Example:

Feed water hardness = 20 grains/gallon Setting: [H 20]

Default = 15 grains/gallon [H -15]

- Use the **Set Up** and **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button to proceed to the next step.

7000 Master Programming Mode

6. Regeneration Time (No display Code)

NOTE: This program step is not available for **Regeneration Type** Meter Immediate [7 - - 2].

Use this program step to set the **Time of Day** a **Regeneration** occurs. A non-flashing colon between the hour and minute digits identifies the Regeneration Time display.

Range = 12:00 – 11:59 P.M., US

Range = 00:00 – 23:59, metric

Example:

2 o'clock A.M. regeneration time Setting: [2:00]

Default = 2:00 A.M.

- Use the **Set Up** and **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button to proceed to the next step.

NOTE: When the piston type is **Filtr**, Regeneration time defaults to:

— 12:00 A.M., US

— 00:00, metric

7. Regeneration Day Override (Display code A)

Use this program step, identified by the letter **A** in the first digit, to set the maximum number of days the unit can be **In Service** without a regeneration.

- For **Regeneration Type Time Clock Delayed** [7 - - 1], the system regenerates at the time set in program step #5 after the number of days programmed in this step.
- For any Meter Regeneration Types [7 - - 2], [7 - - 3], [7 - - 4], the system regenerates after the number of days programmed in this step at the **Regeneration Time** setting, step #6.

Range = 0 – 199, **Time Clock Delayed** [7 - - 1]

Range = 1 – 199, Meter Regeneration Types [7 - - 2], [7 - - 3], [7 - - 4]

Default = 7 days, **Time Clock Delayed** [7 - - 1]

Default = Meter Regeneration Types [7 - - 2], [7 - - 3], [7 - - 4]

Example:

Override every 7 days Setting: [A -- 7]

Option turned off Setting: [A OFF]

- Use the **Set Up** and **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button to proceed to the next step.

7000 Master Programming Mode

9. Flow Meter Size (Display Code F)

NOTE: This program step is not available for **Regeneration Type Time Clock Delayed [7 - - 1]**.

Use this program step, identified by the letter **F** in the first digit, to set the flow meter size. This program step sets the proper number of pulses generated by the flow meter for each gallon or liter of water flow.

Range = 0 – 999 pulses per gallon, US [**u - -1**]

Range = 0 – 99.9 pulses per liter, metric [**u - - 2**]

Default = 82 pulses per gallon, US [**u - - 1**]

Default = 21.6 pulses per liter, metric [**u - - 2**]

Example:

1-1/4" Turbine Meter, US [**u - -1**] Setting: [**F 82**]

1-1/4" Turbine Meter, metric [**u - - 2**] Setting: [**F 21.6**]

- Use the **Set Up** and **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button to proceed to the next step.

10. Safety Factor (Display Code cF)

Use this program step to provide a safety margin by lowering the available capacity. The setting is in percentage and ranges from 0 – 50%.

Example:

[**cF 0**] 0% = No safety factor

[**cF 35**] 35% = The available capacity is lowered by 35%

Default

[**cF 0**] 0% = No safety factor

NOTE: This program step is not available in the time clock mode [**7 - - 1**].

- Use the **Set Up** and **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button to proceed to the next step.

11. Line Frequency (LF)

Use this program step, identified by the letters **LF** in the first digit of the display, to set the frequency of the power supply. When the line frequency is set properly, all timekeeping functions remain accurate. There are two possible settings.

60Hz Line Frequency Setting: [**L F 60**]

50Hz Line Frequency Setting: [**L F 50**]

Default = 60 Cycles (program step #2 = u1)

Default = 50 Cycles (program step #2 = u2)

- Use the **Set Up** and **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button to proceed to the next step.

7000 Master Programming Mode

Exiting the Master Programming Mode

- Press the **Extra Cycle** button once more to exit the Master Program Mode and resume normal operation.
- Finish the control programming by completing the Control Start-up procedures in the service manual.

NOTE: If any changes are made to the Piston / Cam setting during the **Master Programming Mode**, the valve auto-homes when exiting the **Master Programming Mode**.

If any changes were made to capacity, hardware or safety factor settings, the control recalculates the System Capacity and sets the Starting Reserve to one-third of the new value.

Error Codes

NOTE: Error codes appear on the **In Service** display.

There are three possible error codes:

Error Code	Probable Cause	Recover and Resetting
(Err 0)	Drive motor is stalled	Unplug the unit from the power source. When power is restored to the unit, the Err _ display code clears. If the condition causing the error has not been resolved the Err _ code reappears in the four digit display. Do not attempt to troubleshoot this problem any further.
(Err 1)	Drive motor is running continuously	
(Err 2)	There have been more than 99 days since the last Regeneration	Regeneration must occur for the unit to recover, the display to clear and the valve to function normally.

Resetting The Program To The Default Settings

To reset the controller to the default settings press and hold the **Set Up** and **Set Down** buttons for 25 seconds or until the **Time of Day** display resets to 12:00 P.M. This resets all program step settings to the default values. The program steps must then be reset using the Master Programming procedure in these instructions.

NOTE: A **Master Reset** causes the valve to auto-home.

7000 Master Programming Mode
